


Description of the multimedia projector (Main unit) components and connectors

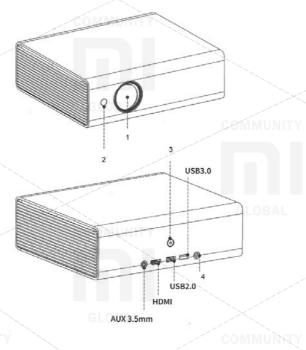

1 - Lens

2 - Webcam

3 - Power button

USB 3.0

USB 2.0


HDMÍ


4 - Power connector

AUX 3.5mm

Wireless charging of third-party devices compliant with the standard is supported. (* This feature is not supported by all devices)



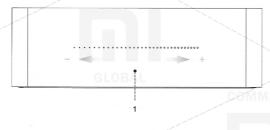

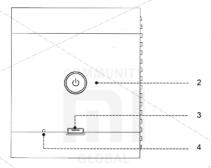

- 1 Swipe left or right to adjust the volume
- 2 Power switch (press and hold to turn on the device)
- 3 Charging connector
- 4 Reset
- (* Bluetooth speakers are not compatible with all devices)



This device is a multimedia projector, based on Android OS, supports the installation and use of programs and applications, viewing and editing WORD, EXCEL, PPT, PDF documents, has built-in Bluetooth. With the built-in Wi-Fi module, you can browse the Web, play online music and videos, download programs.

External storage devices are supported, you can play audio and video (Full HD is supported), view images, documents are stored on an external device, 4K video playback is supported.

All this allows the user to enjoy in any place and at any time an impressive image of a large size.

This device has a large number of connectors, it can connect to laptop, tablet, digital video camera, digital camera, game consoles (PS2 / Xbox / Wii / PSP) / smartphone, DVD player, digital set-top box, etc.; supports the interface for high-definition multimedia HDMI, can be used as a supplement to a large screen for home entertainment, and to organize a mobile office.

Attention!

A class A product, in a domestic environment, may cause electrical interference. In such cases, a user must take the possible measures to remove the obstacles.


Remote control functions

GLOBAL	Label	Button name	Function
(a) (b)	(b) SOMMU	Power button	Standby/Awake mode
6	3D	3D mode button	Change top-bottom, left-right format
9 8 8	(i) GLOB	Home button	Back to standby mode
. @		Menu button	Menu settings
⊕ ⊕	(\$\frac{1}{2}\)	Settings button	Settings
	0	Button "Move" / "Confirm"	Moving the cursor up, down, left, right / confirm
	(I) GLOB	Back button	One step backward
	\bigcirc	Reduce volume button	Reduces volume of media
	(+) ×	Increase volume button	Increases media volume
	(1)	Focus ajustment button	Automatic focus ajustment

(laomi-mi.com

Using the remote control: Using the "Move" / "Confirm" button, select and confirm the selection with the cursor, enter the focus adjustment menu to adjust the focus of the projector by pressing the "Move" button left or right.

 The remote control can be used within a radius of up to 10 meters, directing it in any direction.



If the buttons of the remote control do not work properly, replace the batteries in the remote control, if you do not use the remote control for a long time, it is recommended to remove the batteries.


To connect the console, simultaneously hold down the "Menu" and "Back" buttons on the remote control, position the console near the projector, wait until the indicator on the remote control stops flashing quickly, the connection is complete.

COMMUNITY

GLOBAL

xíaomi-mi.com

Connecting devices (projector)

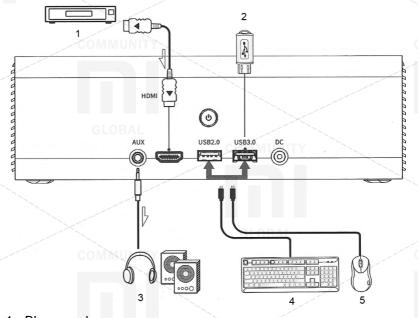

- 1 Blue-ray player
- 2 USB flash drive

HDMI

AUX

USB 2.0

USB 3.0

DC

- 2 Sound Equipment
- 3 Keyboard
- 4 Mouse

: Selecting a signal source

After connecting an external signal, select the appropriate source using the remote control.

Caution

Maximum physical resolution, supported by the device: 1920 x 1080 pixels.

Connecting devices (Bluetooth-speaker)



- 1 Bluetooth connection
- 2 Tablet
- 3 Mobile phone

Bluetooth-speakers can be connected to only one device at the same time, if you need to connect to another device, disconnect from the current device and reconnect to another device.

Accessories





Multimedia projector (main unit)



Multimedia projector (Bluetooth-speakers)



adaptor Power (AC cable)

Batteries (2 pts)







User's manual

Remote

Warranty card

* real accessories may vary from pictures.





