

Portable printer XPrint™

User's manual



Settings


01. Install the APP

Scan the QR code, or download from the App store and download the mobile app XPrint $^{\mathsf{TM}}$.




Press and hold the power button to turn on the printer...

For transportation safety, the battery is not fully charged. After turning on, you need to charge the device, according to prompts in the mobile application.

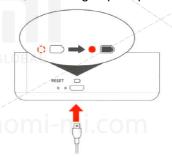

different.

 

Charge approximately 1 hour *, using the charger 5B=2A 10W.

* Data obtained under laboratory conditions, depending on your conditions, the charging time may be



03. Connect to printer

 
Connection method 1: Android-powered mobile phone with NFC support.

- 1. Enable the NFC feature on your mobile phone,
- 2. Put the mobile phone on the printer to automatically connect to printer.





If you can not connect to the printer, make sure that the NFC module of the mobile phone is in the zone above the XPRINT logo and try again.





NFC reading zone

Connection method 2: mobile phone based on Android OS or iPhone with Bluetooth support.

- 1) Go to your mobile phone settings, turn on Bluetooth.
- 2) Update the list of Bluetooth devices, select XPrint-XXXX.
 - 3) Confirm pairing to complete the connection.

Start printing, using mobile APP!

- * To save battery power, the printer will automatically turn off after 10 minutes in standby mode.
- * The photo will go in and out 5 times, for printing in separate colors and lamination. Do not pull paper out of the printer until a message appears in the mobile application, that the printing is complete.

Do not reuse photo paper. Reuse may damage the mechanism.

* As a gift to the device is a removable tray for printing with 9 sheets of photo paper.

Main Parameters

Name	Portable printer XPrint™	
Model COMMUNITY	DMP 100	
Weight	268 g (w/o packaging)	
Input voltage	5V-2A	
Connection method	Bluetooth	
Printing method	Sublimation printing	
Printing dimensions OBAL	2*3 inch (54*86 mm)	
Image format	JPEG, PNG	

Before using the product, read the user's manual carefully and keep it properly

Name and content of harmful substances in the product


Name of	Harmful substances					
component	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Mechanism	0	0	0	0		0
Circuit board	0	Go	В	0	OMMUNY	0
Housing	0	0	0	/ 0	0	0


This table is created according to the provisions of the standard GB/T 26572.

 the content of harmful substance in all homogeneous materials of the component is within the requirements of the standard GB / T 26572.



x: at least one of the homogeneous materials of the component exceeds the limits of the requirements of the standard GB / T 26572.

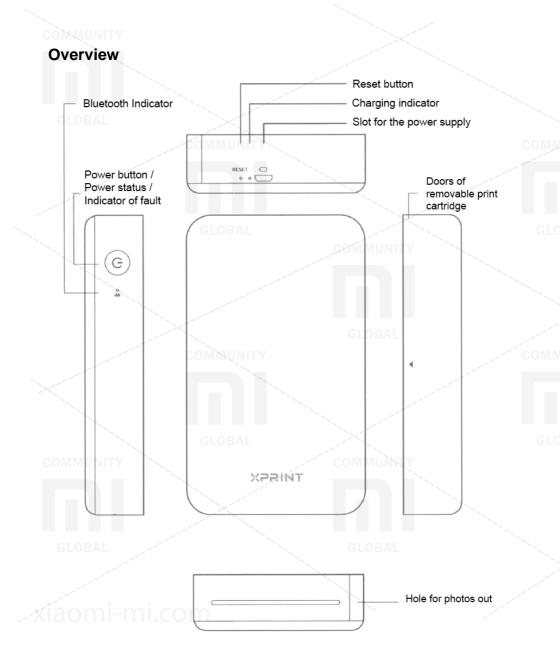

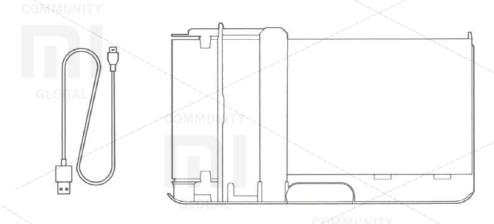

Micro USB Cable x 1

Removable print cartridge x 1

Changing of printing tray

- 1) Open the print-cartridge door bay;
- 2) Obtain a used removable print cartridge;
- 3) Insert a new removable print cartridge.
 - A

Do not open the removable print cartridge and do not reuse a photo paper.

4) Close the door of the removable print cartridge compartment.





Statuses of indicator

01. Powe/Fault indicator

GLODAL	Not light up	Device is off
	Lights white	Device is on
Tables 1	Slowly blinks white	Device upgrades / Heating continues / Cooling continues
	Quickly blinks white	GLOBAL Printing
OMMUNITY	Quickly blinks red	Printer fault Fix the problem, according to the tips in the mobile application

02. Bluetooth Indicator

	Quickly blinks blue	Waiting for connection
aomi-mi.	Lights blue	Connected

03. Charging indicator

	Lights green	Fully charged
GLOBAL	Lights red	Charging

Caution!

- 1. Recommended ambient temperature when using: 5 ° C ~ 35 ° C, avoid using the device in low and high temperatures;
- 2. Recommended temperature during charging: 5 ° C ~ 35 ° C, avoid charging the device at low and high temperatures;
- 3. Recommended image resolution from 1240 x 1864 and above.

For more information, please visit http://www.hannto.com/service or scan your QR code and sign in to our customer support account at WeChat.



M

GLOBAL

GLOBAL